



# 4-Hinge Door Measuring Guide

Single Door


## ON FRAME

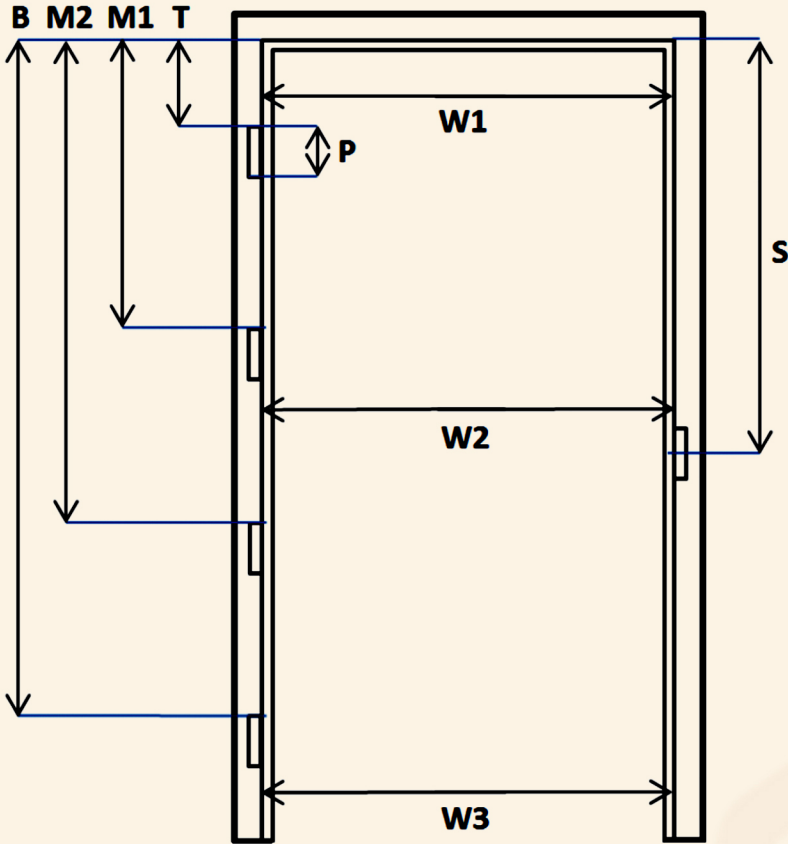


## ON DOOR

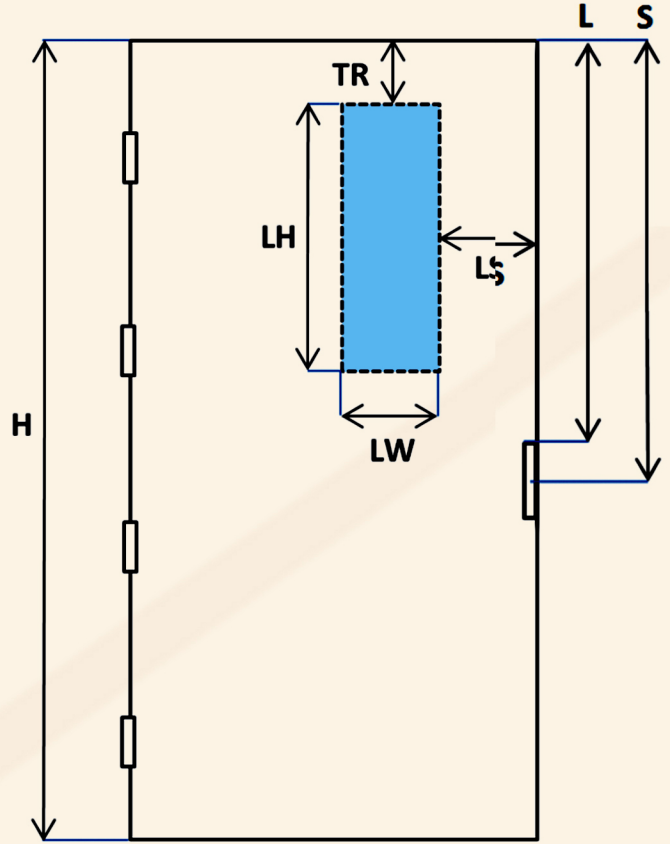

## HINGE BACKSETS

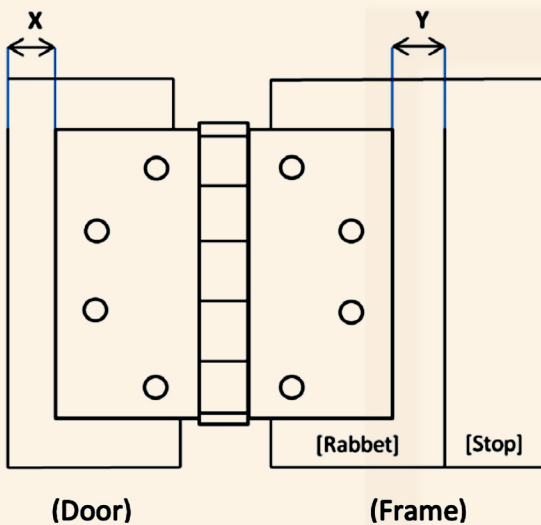

## DOOR HANDING

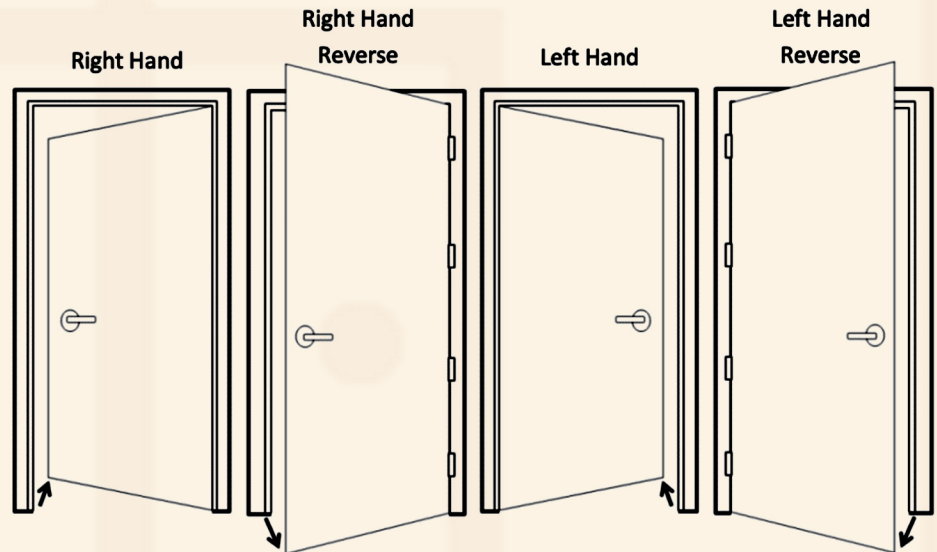


(Viewed from outside/keyside)


# 4-Hinge Door Measuring Guide

Pair Doors


## ON FRAME

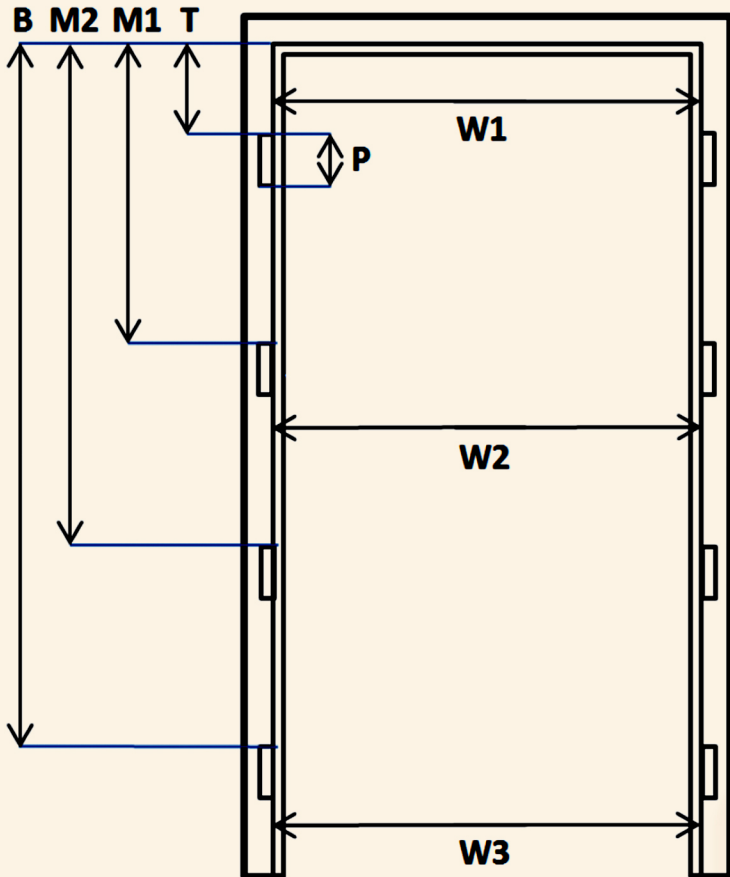


## ON DOOR

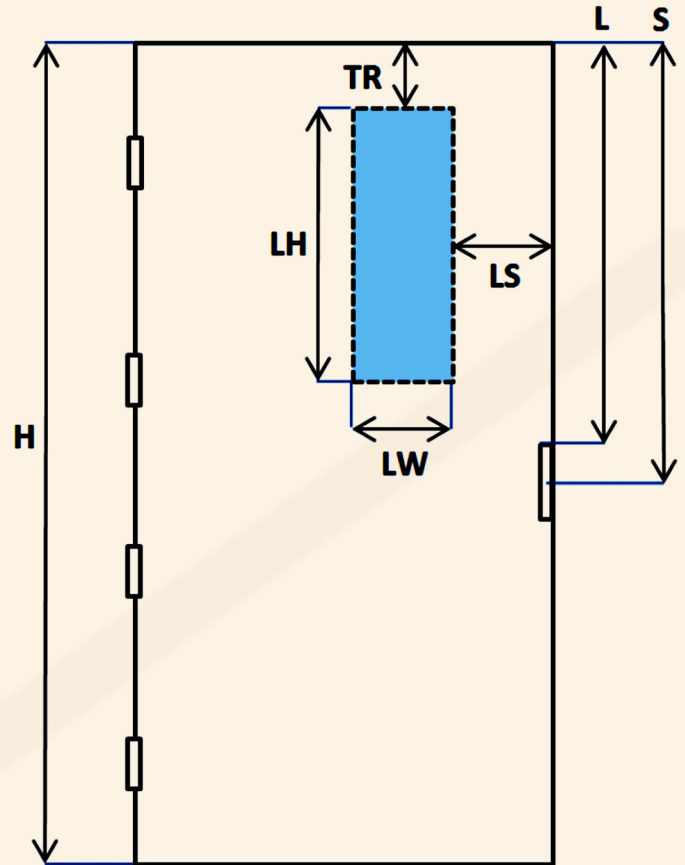

## HINGE BACKSETS

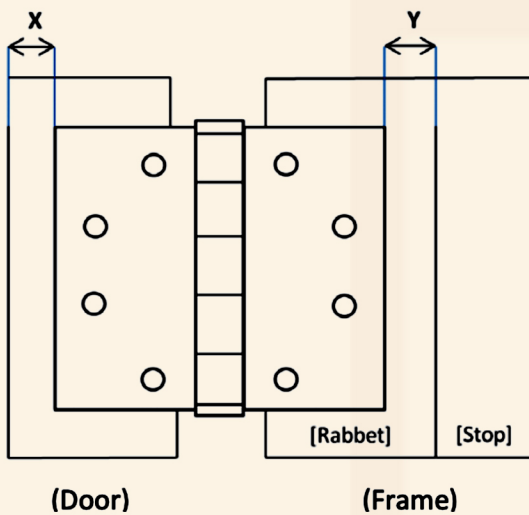

## DOOR HANDING

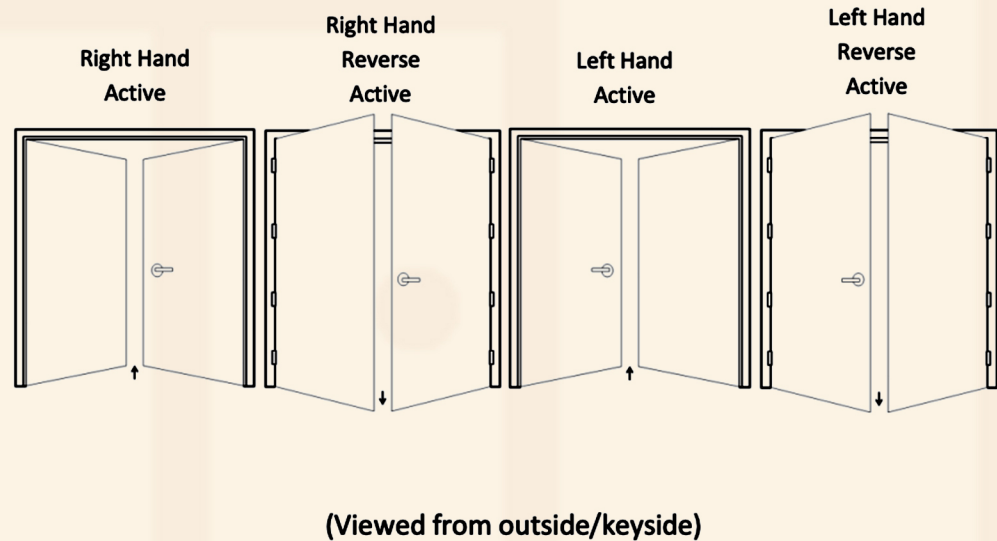

## Job Information

<b>Customer/Facility:</b>	<b>Notes:</b>
<b>Contact Name:</b>	
<b>Contact Phone:</b>	
<b>Contact Fax:</b>	
<b>Contact Email:</b>	

## Door/Frame Measurements

Dimension	Description	Measurement
<b>W1</b>	Width of frame at top	
<b>W2</b>	Width of frame at middle	
<b>W3</b>	Width of frame at bottom	
<b>H</b>	Net door height	
<b>P</b>	Hinge height	
<b>X</b>	Hinge backset on door	
<b>Y</b>	Hinge backset on frame (only needed if no door present)	
<b>T</b>	Top of frame to top of top hinge	
<b>M1</b>	Top of frame to top of first middle hinge	
<b>M2</b>	Top of frame to top of second middle hinge	
<b>B</b>	Top of frame to top of bottom hinge	
<b>S</b>	<u>Cylindrical lock</u> - Top of frame to center-line of strike	
<b>S1 (not shown)</b>	<u>Deadbolt</u> - Top of frame to center-line of strike	
<b>L</b>	<u>Mortise Lock</u> - Top of door to top of 8" mortise pocket	
<b>Handing</b>	Check one: <input type="checkbox"/> RH <input type="checkbox"/> RHR <input type="checkbox"/> LH <input type="checkbox"/> LHR	
<b>Degree of Opening</b>		

## Lite Measurements (if applicable)

Dimension	Description	Measurement
<b>LW</b>	Visible glass width	
<b>LH</b>	Visible glass height	
<b>TR</b>	Top rail thickness (top of door to top of visible glass)	
<b>LS</b>	Lock stile thickness (lock edge of door to visible glass)	